Microphone level not showing ac	ctivity when speaking
---------------------------------	-----------------------

Check that the Amulet Voice Remote is the default audio input device, as described in the Audio Settings section. Restart Media Center after this is corrected.